


## Engine 116 117 with air pump

Remove air filter element (1) and (2)..

Clean out air filter housing and air filter cover.

Inspect filter cover seal and replace if damaged.

Carefully insert new air filter element and note correct location of rubber seals.

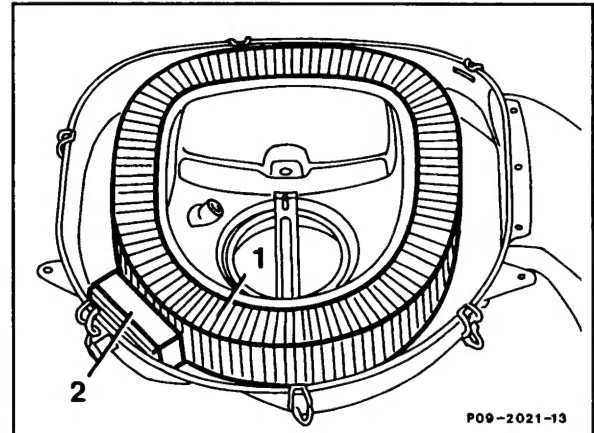

- 1 Engine filter element
- 2 Air pump filter element